



MESSAGGI DI SISTEMA


IN TEMPO REALE (non cambiano lo stato del ricevente)

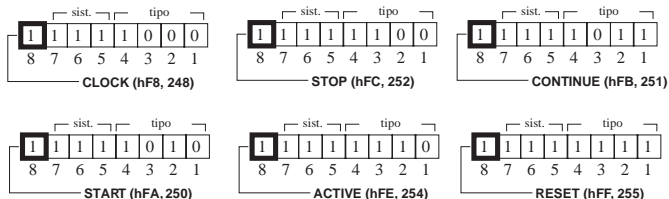

SISTEMA COMUNE

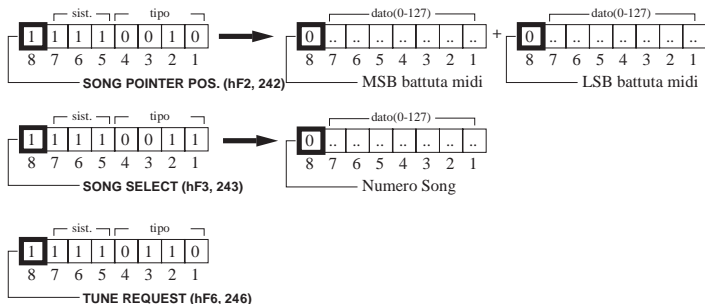


SISTEMA ESCLUSIVO

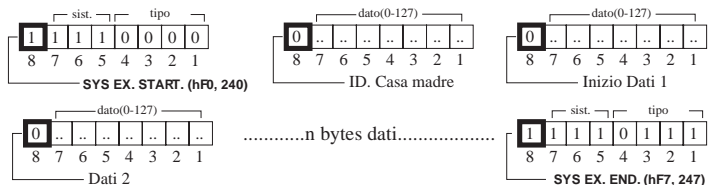


MIDI SAMPLE DUMP

Slave


Master

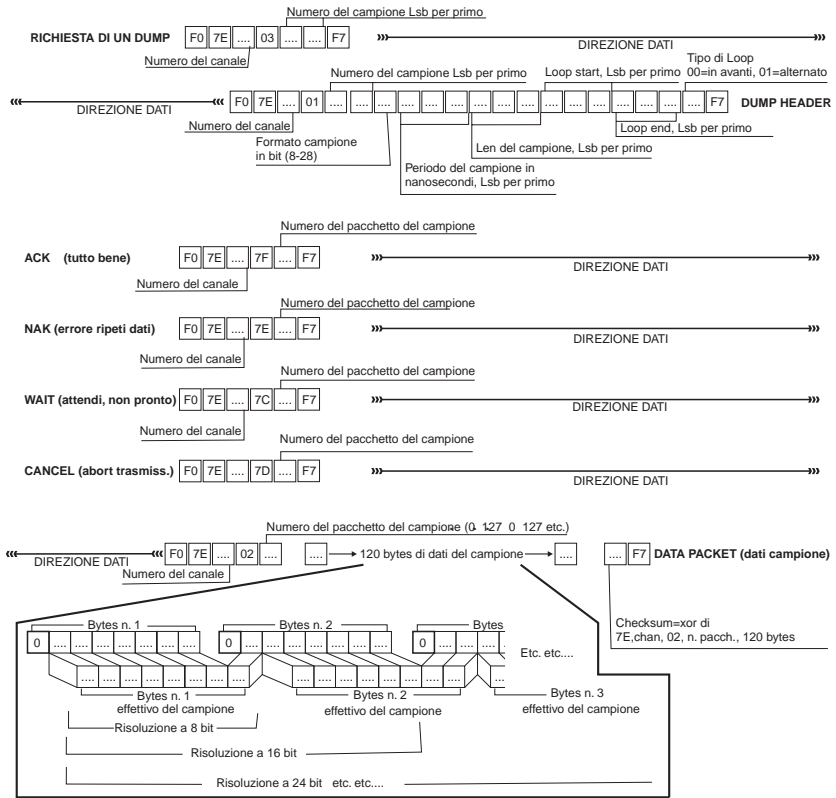

OPEN LOOP

 

HANDSHAKING DUMP

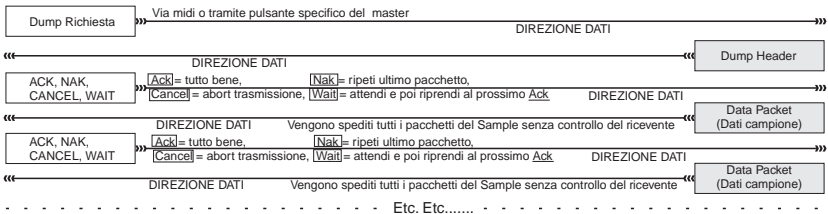


Slave


Master

MIDI TIME CODE

 
MESSAGGIO COMPLETO 10 BYTES (FULL)




QUARTER FRAME 2 BYTES (FOTOGRAMMA)

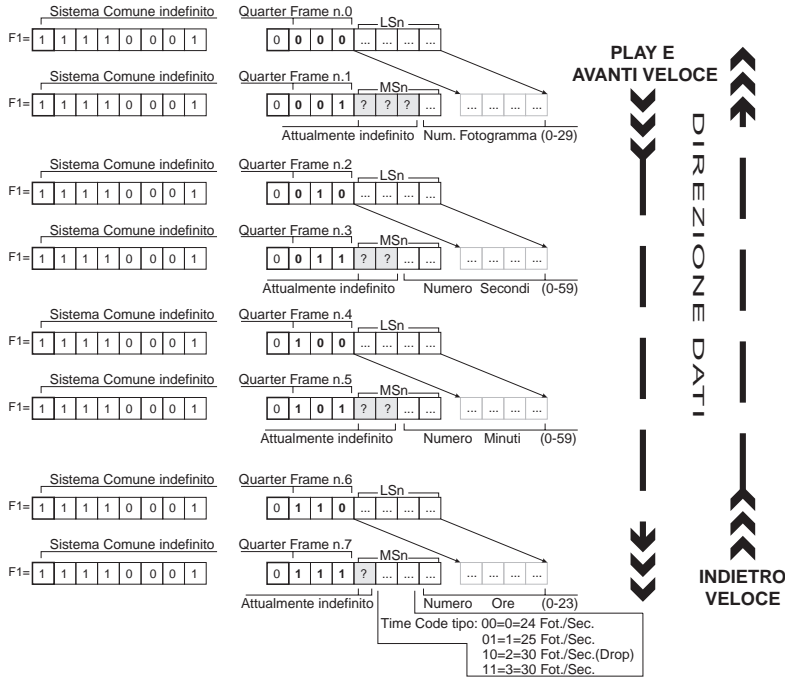


USER BITS 4 BYTES PER USO SPECIALE

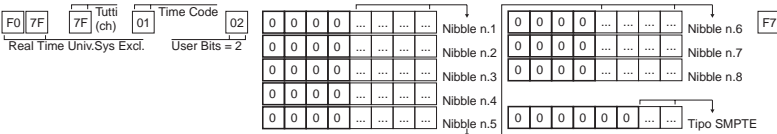

MIDI CUEING

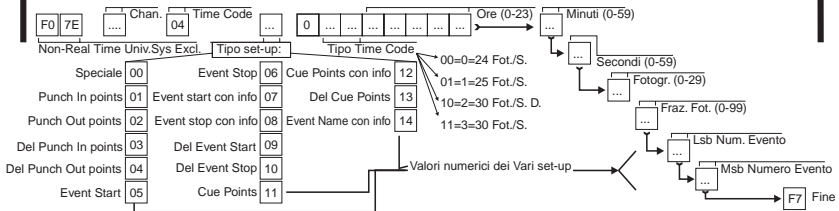

MIDI FILES

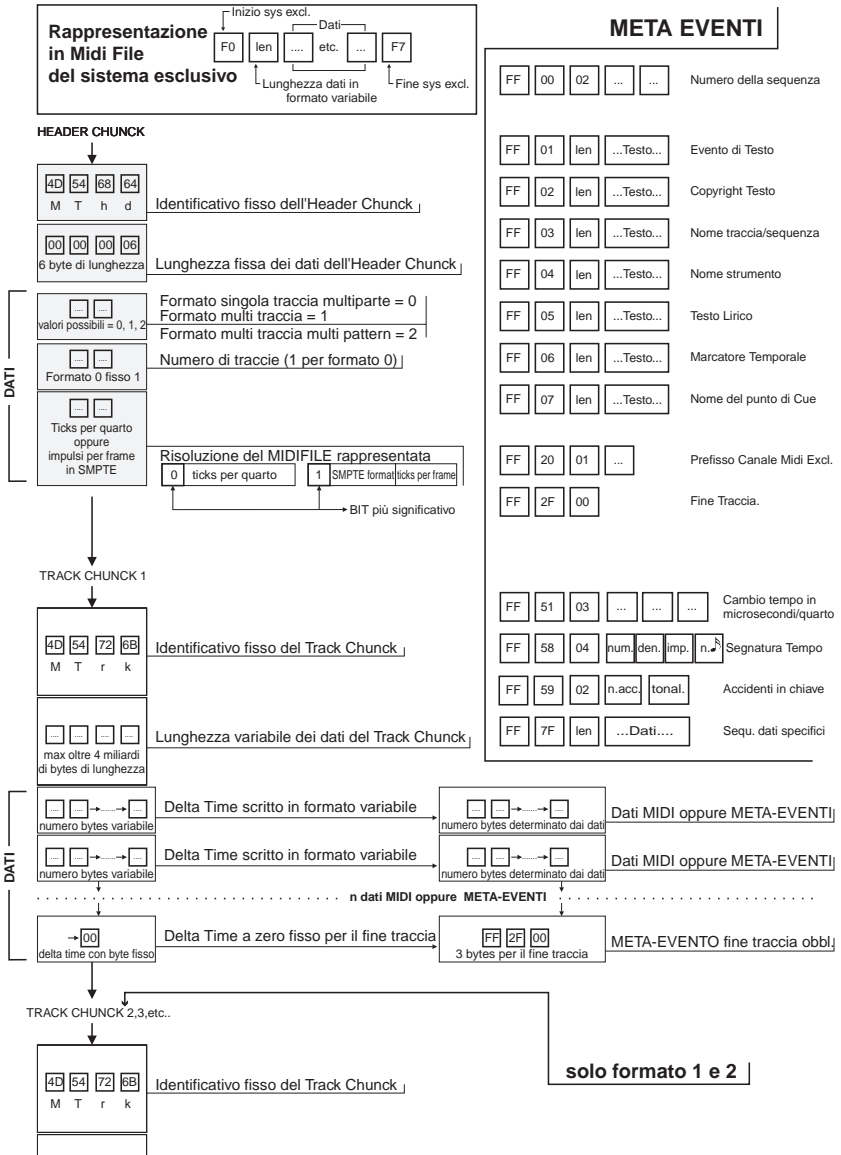

GENERAL MIDI

Timbri per tutti i canali escluso il 10

GRUPPO	Pg.	Bk.	NOME TIM.	GRUPPO	Pg.	Bk.	NOME TIM.	GRUPPO	Pg.	Bk.	NOME TIM.	GRUPPO	Pg.	Bk.	NOME TIM.
Piano	1	0	Gr. Piano	(Guitar)	28	0	El. G. Clean	(Synth Pad)	93	0	P.4 bowed	Sound Effects	0	G Fret Noise	
	2	0	Br. Piano		29	0	El. G. Mute		94	0	P.5 metallic		121	1	G. Cut Noise
	3	0	El. Gr. Piano		30	0	Funk G.	95	0	P.6 halo	2		0	Doub. B. Str.	
	4	0	Honk-Tonk		31	0	Overdr. G.	96	0	F.7 sweep	122		0	Breath Noise	
	5	0	El. Piano 1		32	0	G. Distors.	97	0	F.1 rain	0		Seashore		
	6	0	El. Piano 2		33	0	Feedb. G.	98	0	F.2 soundtr.	1		Rain		
	7	0	Harpischord		34	0	G. harmom.	99	0	F.3 crystal	2		Thunder		
	8	0	Coup. Harp.		35	0	Feed mic. G.	100	0	F.4 atmpop.	3		Wind		
	8	0	Clavicemb.	36	0	El. Finger B.	101	0	F.5 brightn.	4	Stream				
	9	0	Celesta	37	0	El. Pick B.	102	0	F.6 goblins	5	Bubble				
Chromatic Percussion	10	0	Glockensp.	Bass	38	0	Slap Bass 1	Reed	103	0	F.7 echoes		104	0	Bird Tweet
	11	0	Music Box		39	0	Slap Bass 2		67	0	F.8 sci-fi		1	Dog	
	12	0	Vibraphone		40	0	Synth B. 1		68	0	Night Sax	2	Horse Gallop		
	13	0	Marimba		41	0	Synth B. 2		69	0	Bari. Sax	3	Cart Ring		
	14	0	Xylophone		42	0	Synth B. 3	70	0	Oboe	4	Drum Clos.			
	15	0	Tubul. Bells		43	0	Synth B. 4	71	0	Engl. Horn	5	Door Creak			
	16	0	Dulcimer		44	0	Violin	72	0	Bassoon	6	Door Clos.			
	17	0	Draw. Org.		45	0	Viola	73	0	Clarinet	7	Scratch			
	17	0	Dr. Tr. Org.	46	0	Cello	74	0	Piccolo	8	Windchime				
	Organ	18	0	Perc. Org.	String	47	0	Contrabass	Pipe	105	0	Sitar	9	Car Crash	
18		0	Per. Tr. Org.	48		0	Tremolo Str.	75		0	Flute	106	0	Banj	
19		0	Rock Org.	49		0	Pizzic. Str.	76		0	Recorder	107	0	Shamisen	
20		0	Church Org.	50		0	Orch. Harp	77		0	Pan Flute	108	0	Koto	
20		0	Chr. Org. 2	51	0	Timpani	52	0	Sine	109	0	Taisho Koto			
21		0	Reed Org.	53	0	Str. Ens. 1	54	0	L. 1 square	110	0	Kalimba			
22		0	Accordion	54	0	Orchestra	55	0	L. 2 sawtop.	111	0	Bag pipe			
23		0	Accordion II	55	0	Str. Ens. 2	56	0	L. 3 calliope	112	0	Shanai			
24		0	Harmonica	57	0	SynthStr.1	58	0	L. 4 chifff	113	0	Tinkle Bell			
24		0	Tango Acc.	58	0	SynthStr.3	59	0	L. 5 charang.	114	0	Agogo			
Guitar	25	0	Guitar Nyl.	Ensemble	59	0	SynthStr.2	Synth Lead	115	0	Steel Drums	Percussive	116	0	Woodblock
	26	8	Guitar Steel		60	0	Choir Aahs		61	0	L. 6 voice		117	0	Castanets
	26	8	12 String G.		62	0	Choir Oohs		63	0	L. 7 fifths		118	0	Mel. Tom
	26	8	Mandolin		64	0	Synth Voice		65	0	L. 8 bass-le.		119	0	Mel. Tom2
	27	0	El. G. Jazz	66	0	Orchestra.Hrt	67	0	P.1 new age	120	0		Synth Drum		
	27	8	Hawaiian G.	68	0	Trumpet	69	0	P.3 polysvnt	121	0		Talko Drum		
				69	0	Trombone	70	0	P.4 choir	122	0		C. Bass Dr.		
									123	0	Rever. Cym.				

Percussioni canale midi 10

KeyPrg	NOME TIM.	KeyPrg	NOME TIM.	KeyPrg	NOME TIM.	KeyPrg	NOME TIM.
35	1 Bass Drum acoustic	43	9 Room Low Tom 1	50	17 Room Hi Tom 1	66	1 Low Timbale
36	1 Bass Drum 1 rock	44	1 Ride Cymbal 1	51	1 Ride Cymbal 1	67	1 High Agogo
37	1 Power Kick	45	1 Pedal Hi-Hat	52	1 Chinese Cymbal	68	1 Low Agogo
38	1 Side Stick	46	1 Low Tom	53	1 Ride Bell	69	1 Cabasa
39	1 Snare Drum	47	9 Room Mid Tom 2	54	1 Tambourine	70	1 Maracas
40	1 Gated Snare	48	17 Room Mid Tom 2	55	1 Solash Cymbal	71	1 Short Whistle
41	1 Brush Tap	49	1 Open Hi-Hat	56	1 Cowbell	72	1 Long Whistle
42	1 Hand Clap	50	1 Low Mid Tom	57	1 Crash Cymbal 2	73	1 Short Guiro
43	41 Brush Slap	51	9 Room Mid Tom 1	58	1 Vibriaslapp	74	1 Long Guiro
44	1 Snare Drum 2	52	17 Room Mid Tom 1	59	1 Ride Cymbal 2	75	1 Claves
45	41 Brush Swirth	53	1 Hi Mid Tom	60	1 Hi Bongo	76	1 Hi Wood Block
46	1 Low Floor Tom	54	9 Room Hi Tom 2	61	1 Low Bongo	77	1 Low Wood Block
47	9 Room Low Tom2	55	17 Room Hi Tom 2	62	1 Mute Hi Conga	78	1 Mute Cuica
48	17 Room Low Tom2	56	1 Crash Cymbal 1	63	1 Open Hi Conga	79	1 Open Cuica
49	42 1 Close Hi Hat	57	1 High Tom	64	1 Low Conga	78	1 Mute Triangle
50	43 1 High Floor Tom	58	9 Room Hi Tom 1	65	1 High Timbale	79	1 Open Triangle

Impostazioni generali

Polifonicità: 24 note simultanee (16+8 perc.)
Canali Midi: 16 Canali
Politimbricità: 16 Timbri contemporaneamente
Do Centrale: nota numero 60
Dati di Default: pitch bend=0,
 escursione pitch bend=±2 semitoni
 volume=90
 tutti altri controller=reset

Variazioni al tono principale tramite:

Control change 0

B0	00
----	----	------

 Numero Banco (Bk. 0-128)

Variazioni set drum tramite:

Program Change canale 10 Set (Prg. 1-128)

C9
----	------